


MISTAWAY MA1200C FILTER SETUP

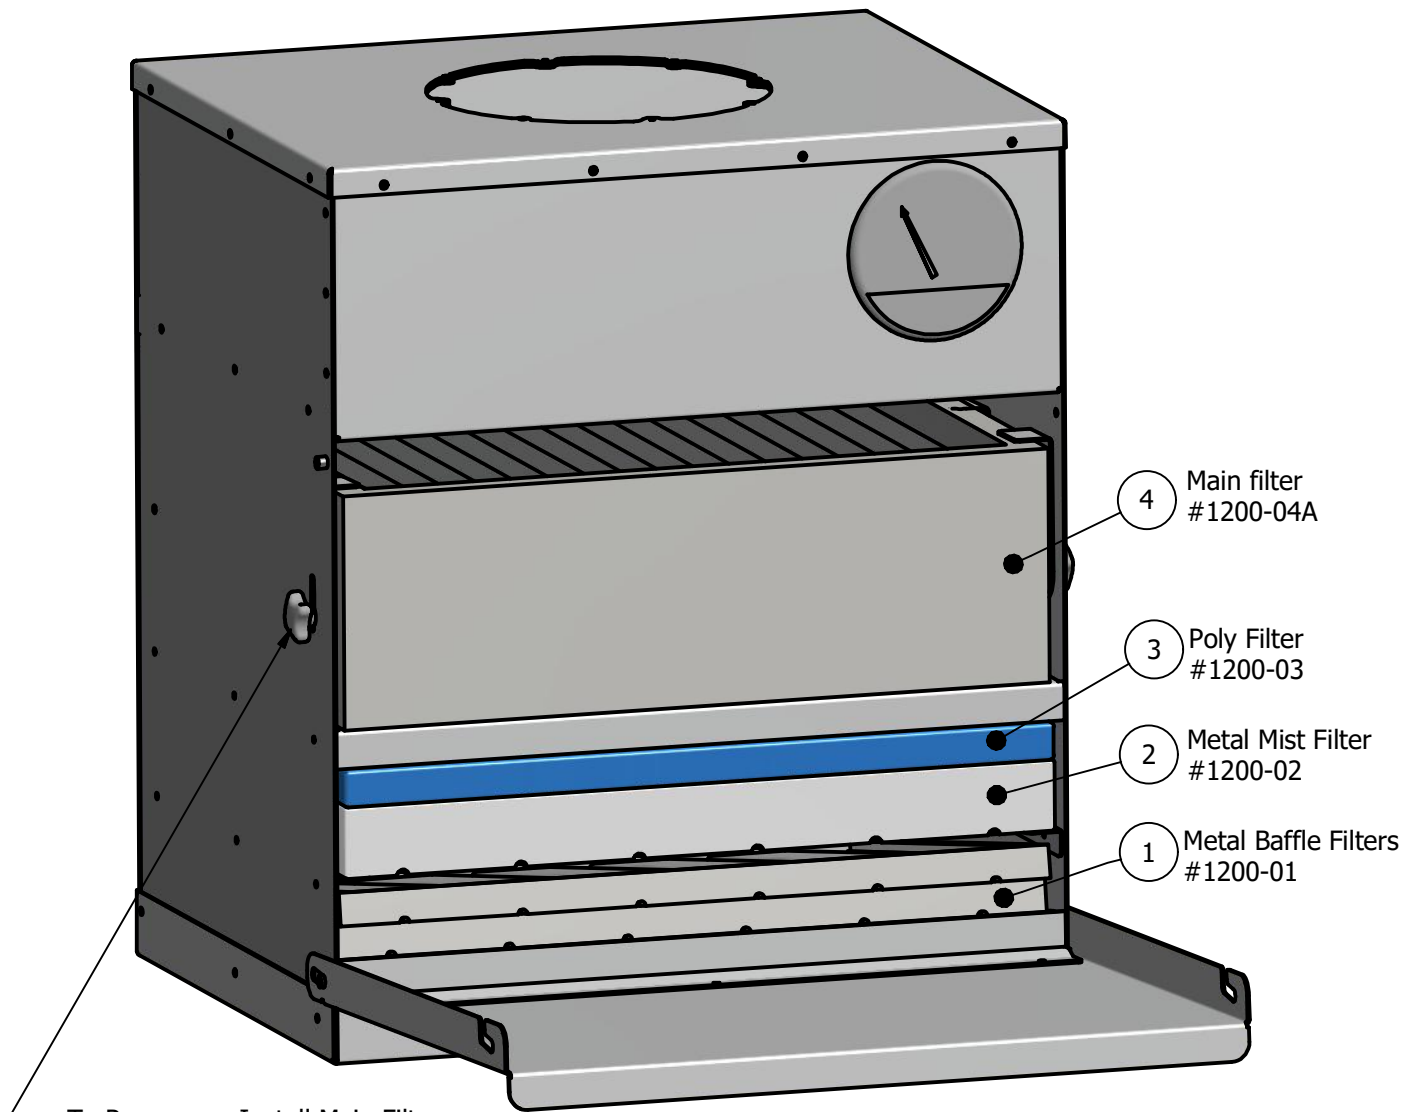

To Remove or Install Main Filter:

- 1) Loosen Knob on each side of Mistaway
- 2) Raise Clamping Bars to release Main Filter or lower Clamping Bars to clamp Main Filter in place
(Tighten knobs while holding downward pressure on clamping bars)

FILTER PARTS LIST			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	2	1200-01	20" x 25" x 1" Metal Baffle Filter (drain holes down)
2	1	1200-02	20" x 25" x 2" Metal Mist Separating Filter (drain holes down)
3	1	1200-03	20" x 25" x 1" Polyester Filter
4	1	1200-04A	20" x 25" x 6" Merv 14 Main Filter

Caution: Edges of metal filters are SHARP!

Wear gloves when handling or changing metal filters.

Note: After Filter option is recommended in applications where smoke is created in the machining process.